


Assembly instruction ALUMINIO


Step 1 - Place in position

Place in position both claws of ALUMINIO at an angle to the window profil

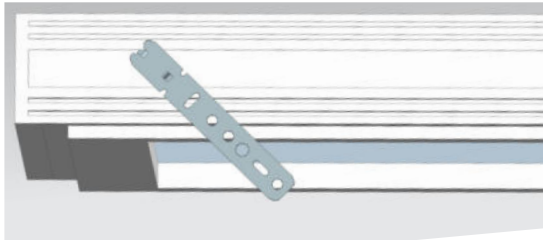


Step 2 - Screw in

Screw in at a 90° angle to the window profile

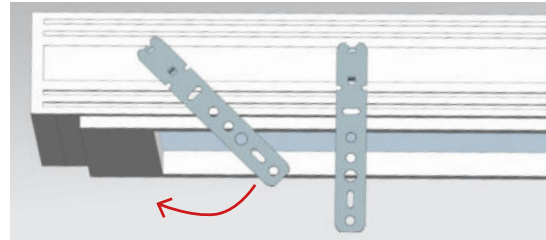


Step 3 - Bend

After screw in, the required offset high can be bent with target bending points (elongated holes)

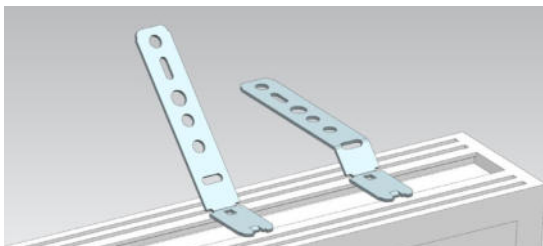

Step 4 - Insert window frame

Insert the window frame, align it and use suitable window screw to fix at the embrasure

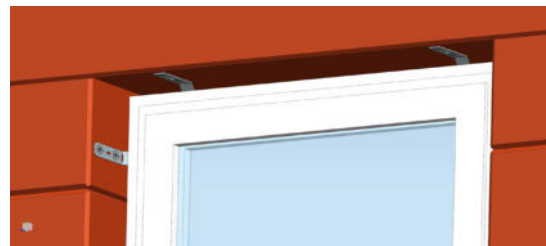

Note: The number of ALUMINIO depends on the size of window - the distance between the ALUMINIO may be a maximum of 600 mm for PVC windows. The weight of the window must be absorbed by supporting and spacer blocks (not included in scope of delivery) at the underside of the window.