

## Assembly instruction MUNTADO

### Step 1 - Insert window / door

Insert floor deep window- or door element at provided wall recess




### Step 2 - Align the window / door

Align the floor deep window- or door element at desired position




### Step 3 - Positioning

Position MUNTADO at lower area of floor deep window- or door element

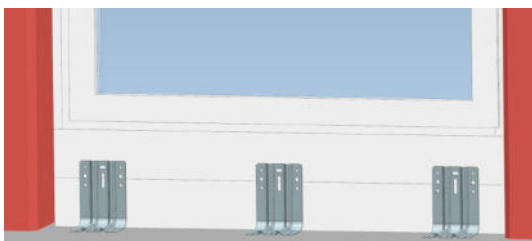

### Step 4 - Screwing

Use suitable window screw to fix MUNTADO at base insulation profile of floor deep window- or door element and at the floor

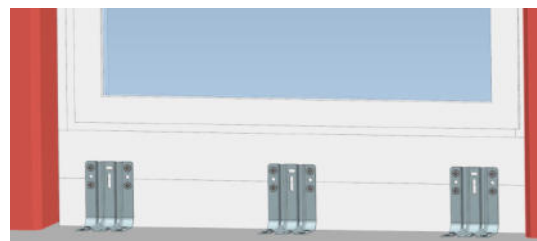

**Note:** The number of MUNTADO depends on the size of the floor deep window- or door element. The weight of the window- or door element must be absorbed by supporting and spacer blocks (not included in scope of delivery) on the underside of the window/door